

Element Housing CMH Ballast





CAUTION - RISK OF FIRE The transformer should be replaced only by a qualified electrician. Before replacing, read all instructions and TURN OFF POWER TO THE FIXTURE.

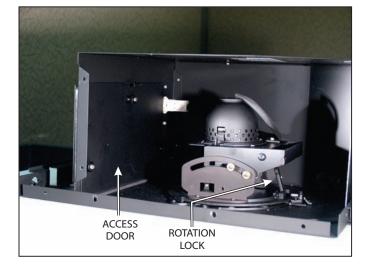

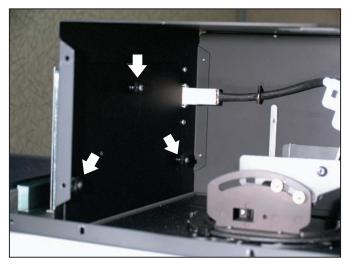







2 Remove the trim.

 Release the rotation lock and rotate the housing so the opening faces the access door. The rotation lock will be on the opposite side of the access door.

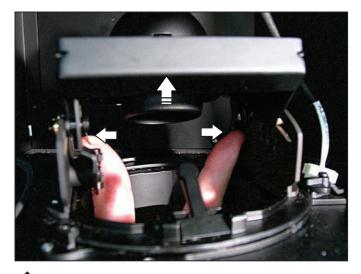

 Squeeze the tabs to release the lamp housing and push the housing back.






Pull the handle on the access door and remove the door.


NOTE: The access door will not fit through the fixture opening. Set it aside within the fixture during this repair.



Remove the two thumb nuts inside the electrical box. These thumb nuts hold the ballast in place.

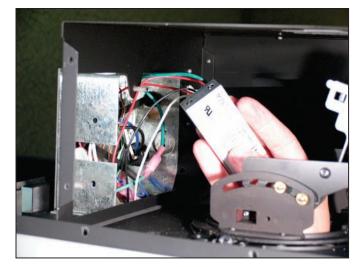

8 Pull the ballast out of the housing. Do not disconnect any wires at this time. The wires have enough slack to pull the ballast completely out without disconnecting.

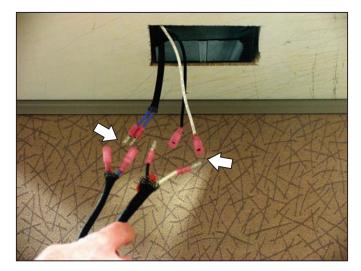



9 Pull the ballast wires out until the terminals are accessible.

Disconnect the original ballast at the terminals and connect the new ballast, matching the wires by color. If the connectors don't fit together properly, clip off the connectors and attach the wires by using wire nuts.



Feed the wires back into the electrical box and put the new transformer in place.







Place the access door onto the studs.

14 Install and tighten all 3 thumb nuts on the access doors.

(15) Pull the lamp housing back into place, rotate it to the desired position, and set the rotation lock.



16 Reinstall the trim.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077 847.410.4400

www.element-lighting.com

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Element" graphic is a registered trademark of Element. Element reserves the right to change specifications for product improvements without notification. A Generation Brands Company