# Round or Square IC, Non IC and Chicago Plenum Dual Adjustable Housings

E3\_L\_DA\_-HANM 1.0



**LED - ROUND/SQUARE** 


#### **GENERAL PRODUCT INFORMATION:**



This product is suitable for indoor locations.

This product can be dimmed with a standard magnetic dimmer.

This instruction shows a typical installation.

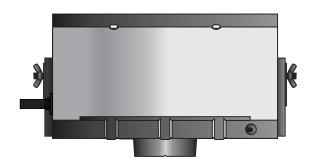


#### **CAUTION - RISK OF FIRE**

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

### **Install the Housing with Adjustable Bars**

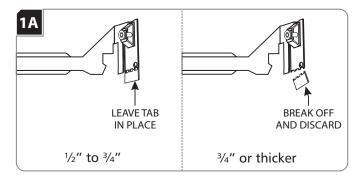


**NOTE:** Skip this section if installing the housing with butterfly brackets.


**1** Keep Tab for ceiling ½" to ¾" thick.

When using adjustable hanger bars with ½" to ¾" thick ceilings, leave the tab of the hanger bars in place. Break off Tab for ceiling ¾" or thicker.

When using adjustable hanger bars with 34" or thicker ceilings, remove the tab by bending it at the perforation.

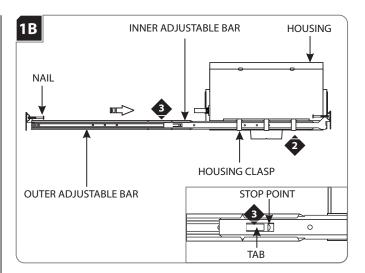


- 2 Slide the inner adjustable bar completely through the three housing clasps. Make sure the nail is on top.
- Slide and push the outer adjustable bar completely onto the inner adjustable bar so that the tab clicks into place behind the stop point. This will prevent the adjustable bars from coming apart.
- 4 Repeat steps 2 & 3 for the other side of the housing.

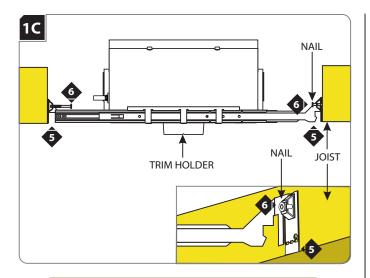

**NOTE:** The adjustable bars can be mounted to joists that are spaced 16" - 24" apart.


- 5 Align the bottom of the end plates with the bottom of the ceiling joists.
- 6 Level the adjustable bars and, with a hammer, tap the nails completely into the joists to secure the adjustable bars in place.

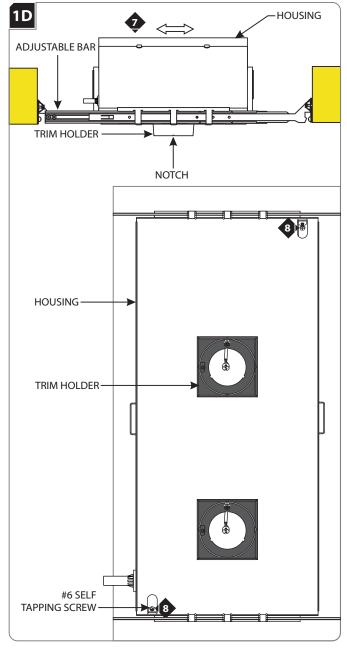

- Adjust the trim holder position (horizontal position) by sliding the housing on adjustable bars.
- When the desired location is achieved, tighten the two #6 self tapping screws to lock the housing onto the adjustable bars.

**NOTE:** Notches in trim holder can be used to align multiple housings using a laser or string.

# Install the Housing with Butterfly Brackets

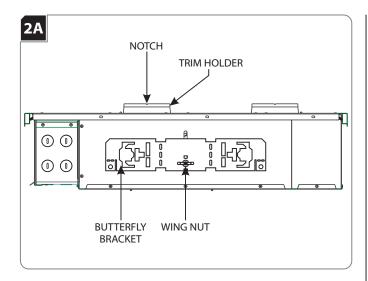


**NOTE:** Skip to page 3 if installing the housing with adjustable bars.


- Slightly loosen the wing nut to slide the butterfly bracket up or down.
- After achieving the proper location, tighten the wing nut to secure the butterfly bracket in place.
- Repeat steps 1 and 2 on for the other butterfly bracket.
- 4 Utilize the butterfly brackets to install the housing in accordance with local electrical codes.

**TIP:** Notches in trim holder can be used to align multiple housings using a laser or string.

## **Connect Power to the Housing**

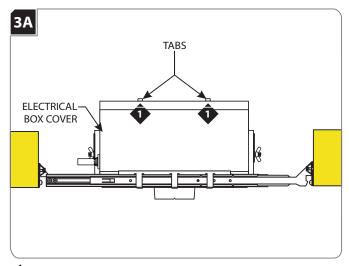


Push up on the tabs on the electrical box and remove the electrical box cover.

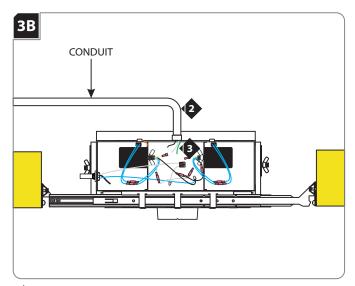


- 2 Install the conduit to the housing electrical box.
- Run the power line wires into the housing electrical box.

WARNING: RISK OF FIRE: When using the housing electrical box for power feed through, use MAX 4 - #12 AWG, or 6 - #14 AWG branch circuit wires.

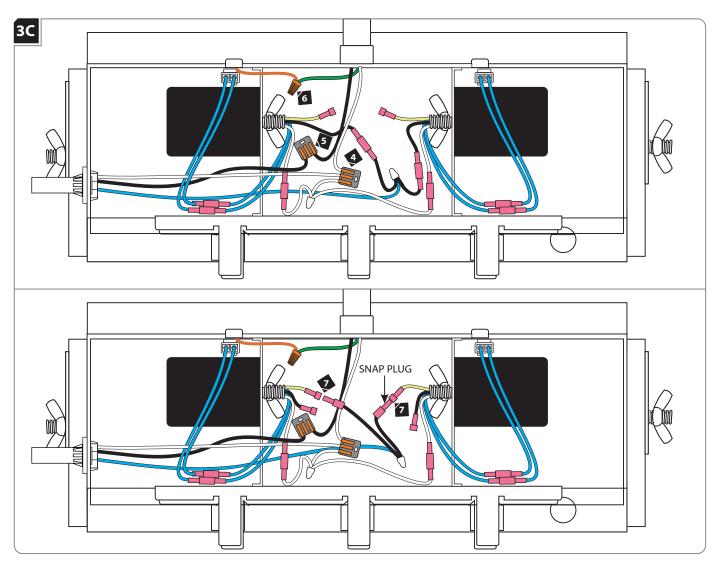


- Connect the neutral power line wire to the white thermal protector wire and two transformer wires by inserting it into an available port on the connector.
- Connect the hot power line wire to the black thermal protector wire by inserting it into an available port on the connector.
- 6 Make sure that housing is grounded in accordance with local electrical codes.
- If using a dimmer: Disconnect the snap plugs between the two black transformer wires and the blue thermal protector wire. Connect the two yellow transformer wire snap plugs to the two blue thermal protector wire snap plugs.
- Replace the electrical box cover. Make sure that the top edge of the cover snaps under both tabs.

## **Install Drywall**

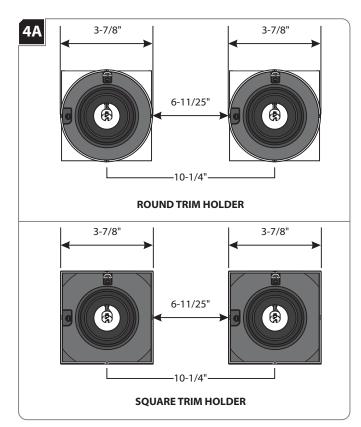


- For round trims, mark two 3-7/8" diameter circles on the drywall spaced 10-1/4" apart on center. Cut out the marked sections.
- For square trims, mark two 3-7/8" squares on the drywall spaced 10-1/4" apart on center. Cut out the marked sections.

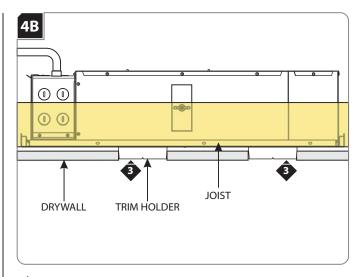


Align the cut out section of drywall with the trim holders and install the drywall.

**WARNING:** <u>Risk of Fire:</u> The housing is not intended to be in contact with or covered with combustible materials and insulation. Do not install insulation within 3 inches of the housing sides or above in such a manner to entrap heat.

# Install Plaster Ring (For Flangeless Versions Only)

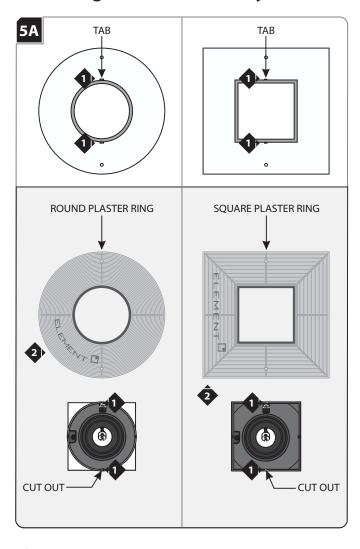


- Line up the two tabs in back of the plaster rings with the two cut out sections of the trim holder's inside edge.
- Push the plaster ring tabs into the cut out sections of the trim holder's edge.

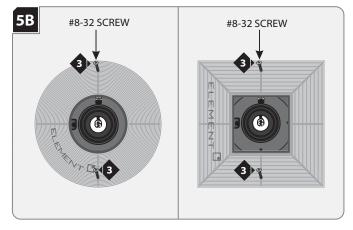


Secure both plaster rings in place with the two provided flat head #8-32 screws. Make sure that the screws penetrate through the drywall into the housing screw holes.

**NOTE:** Do not overtighten the screws! Overtightening may bend the plaster ring, causing the plaster surface to come away from the drywall.

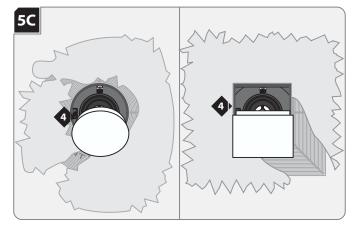


- 4 Plug both trim holders with the provided dust shield.
- Properly plaster onto the plaster rings and drywall.

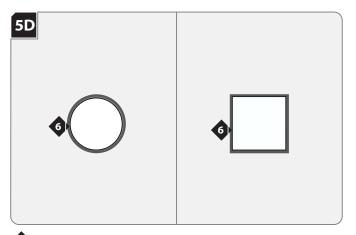


6 Finish around the trims to match drywall.


#### **Install the Lamp & Lens Accessories**

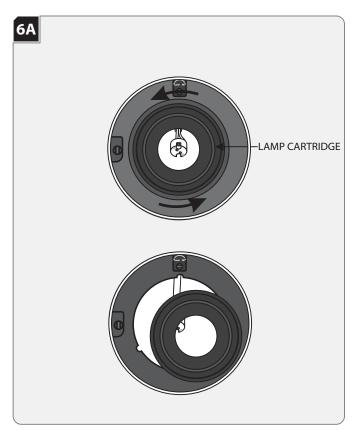

To release the lamp cartridge, rotate it counter clockwise and gently pull out the assembly.

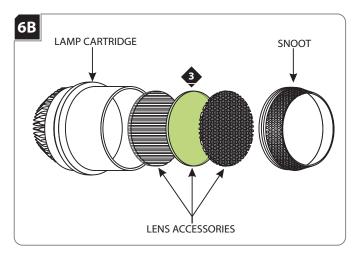


- To install a lens accessory (optional), unscrew the snoot from the lamp cartridge.
- Place a maximum of three accessories into the lamp
- Replace and tighten the snoot completely to the lamp cartridge.

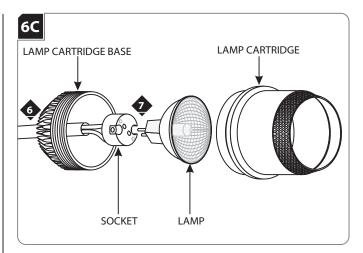

Use **MAX 50** Watt Type MR16 Halogen Lamp.


- 5 Unscrew the lamp cartridge base from the lamp cartridge.
- Pull out the socket from the lamp housing and feed it through the lamp base.
- Push the lamp pins completely into the socket holes.
- Place the lamp into the lamp cartridge and reinstall the lamp cartridge base and firmly tighten.

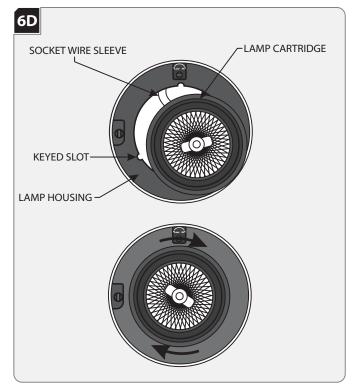


- Feed the socket wire sleeve back into the lamp housing and align the lamp assembly with the keyed slots on the lamp housing.
- Place the lamp assembly into the lamp housing and rotate it until it locks into place.

## **Adjust the Lamp Housing**

**NOTE:** The location of the height adjustment screw is indicated with the words Low and Hi.

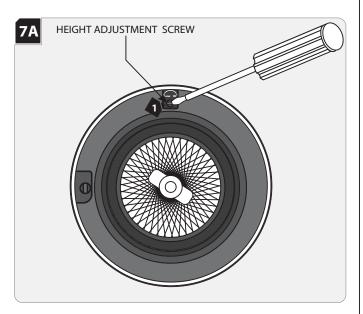


To adjust the height rotate the height adjustment screw. Adjust upward to minimize glare and flash on the trim or downward for maximum light output and efficiency.

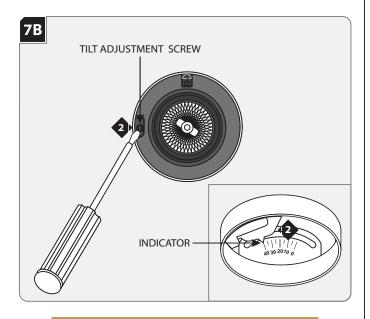

**NOTE:** Lamp housing can tilt 40° vertically. Lines on lamp housing are 5° apart.

To tilt the lamp housing vertically, rotate the tilt adjustment screw until the desired angle is reached.

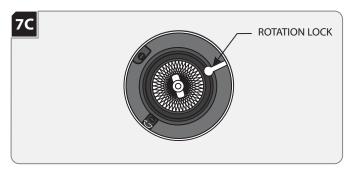

**NOTE:** Lamp housing can rotate 361° horizontally.

- 3 Pull the rotation lock down to unlock the lamp housing.
- 4 Rotate the lamp housing horizontally. When the desired position is achieved push the rotation lock up to lock the lamp housing in place.

#### **SAVE THESE INSTRUCTIONS!**



7400 Linder Ave. Skokie, IL 60077 847.410.4400

#### www.element-lighting.com

© 2015 Tech Lighting, L.L.C. All rights reserved. The "Element" graphic is a registered trademark of Element. Element reserves the right to change specifications for product improvements without notification.